

Plate Adjustments

- Turn plate hold down to release seed plate. Remove seed plate from meter. Now, remove hair pin on drive hub. Reinstall seed plate and lock seed plate back down. Hold drive side and turn seed plate till you have about 5 lbs of drag on the seed plate. When set take off seed plate and reinstall hair pin in hub to lock setting.
- Keep in mind that vac will pull plate away from meter face taking the drag out.
- If seed is seen falling out from vac cover. More drag is needed.
- If drive breaks you then have too much drag.

